


- Non-removable USB memory stick.
- The USB stick can be locked and unlocked easily by Lock key (smart keeper UNIVERSAL KEY).


1. Product parts

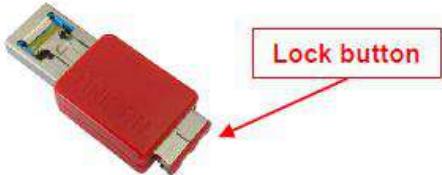

2. Check USB Port



Secure Memory USB doesn't work when

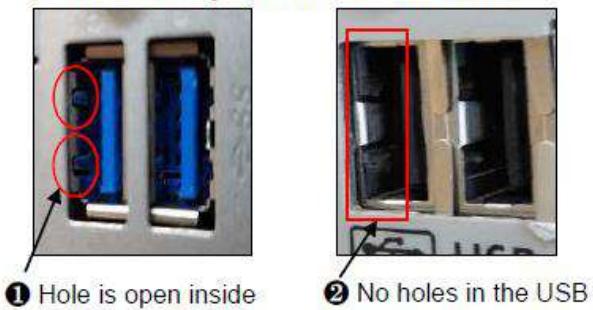

3. Installation



① Select USB Port to use



② Insert LINKON




③ Press Lock Button




④ Installation finished

4. Uninstallation

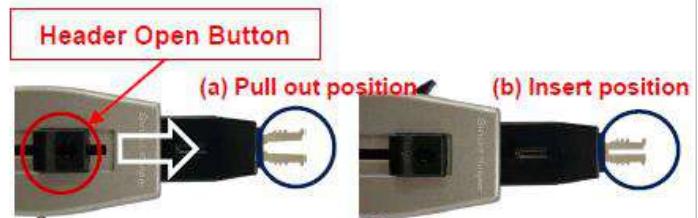

① Press "Header Open Button" all the way toward to change the key to (b) Insert position

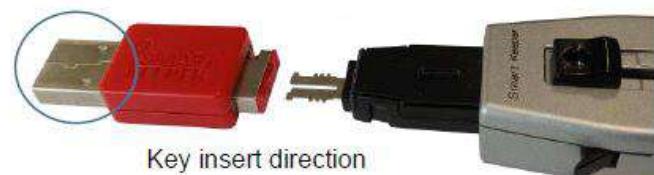

② Insert the Universal key into LINKON lock button hole. Make Universal key to (a) Pull out position and pull out the lock button



④ pull out LINKON